



# Hand Switch

## Programmable

### Front View

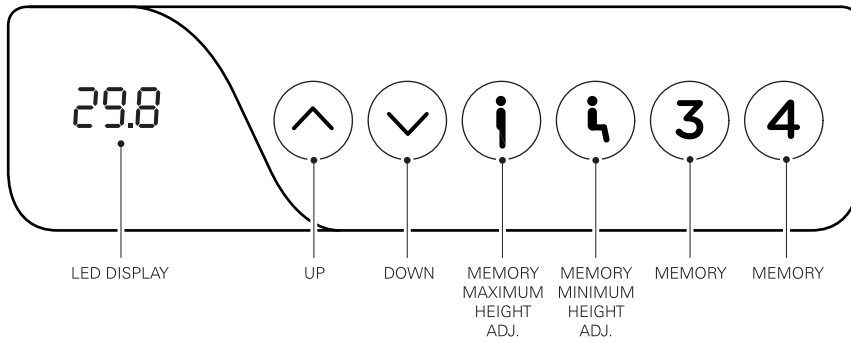

### Side View

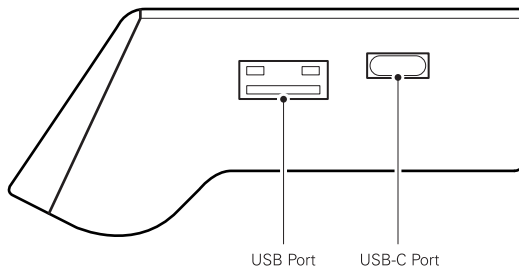

Button introduction: There are 6 buttons that "⤴", "⤵", "i", "i", "3", "4"

- (1) "⤴" : Adjust the desk upwards
- (2) "⤵" : Adjust the desk downwards
- (3) "i" : User height memory setting position 1
- (4) "i" : User height memory setting position 2
- (5) "3" : User height memory setting position 3
- (6) "4" : User height memory setting position 4

## Initial Setup/Reset

### IMPORTANT: You must RESET the desk before use.

#### Initial Setup / Reset:

- 1) When the LED display shows "r 5.1"; the desk starts the reset process. Keep pressing the "⏴" button until the desk reaches the lowest position and bounces up, the display shows the current height, release the "⏴" button and then the reset completes.
- 2) When the desk is in a static state, press and hold "3" and "4" buttons for 3 seconds simultaneously and the desk starts reset process. Repeat the STEP 1 and then the reset is completed. After that, the height you saved will be cleaned.

#### Quick Charge

**Safe:** Built-in over-temperature protection, over-current protection, short-circuit protection, etc., output interface current-limiting protection can ensure that the product works within the normal current range;

**Compatible:** The product is compatible with mainstream smart phones and laptops on the market, and can quickly charge the device.

#### Output Parameters:

- 1) Single USB Type-C port output: MAX 45W, 5V=3A, 9V=3A, 12V=3A, 15V=3A, 20V=2.25A;
- 2) Single USB Type-A port output: MAX 27W, 5V=2A, 9V=2A, 12V=1.5A, 15V=1.8A, 20V=0.9A, compatible with Xiaomi CHARGE TURBO, Huawei FCP/SCP, Samsung AFC protocol;
- 3) When both Type-C and Type-A are connected to the device, the output voltage drops to 5V to power the device, and the MAX is 22.5W.
- 4) **Note:** When the standing desk is lifting, the charging function will be turned off, and when the standing desk stops lifting, the charging function will return to normal.

#### Up/Down:

The height of the desk can be adjusted up or down by pressing the "⏶" or "⏴" button, and the current height will show on the display.

#### Setting Presets:

- 1) When the desk is in a static state, press and hold the button "i" for three seconds, the display shows "5-1"; which means the save is successful. Then adjust the desk to any height. Click the "i" button and the desk will adjust to the height you saved.
- 2) Buttons "i", "3", and "4" all have the same height memory function as button "i"; repeat the above steps to save the height to the corresponding position. Then click the button and the desk will adjust to the height you saved.